


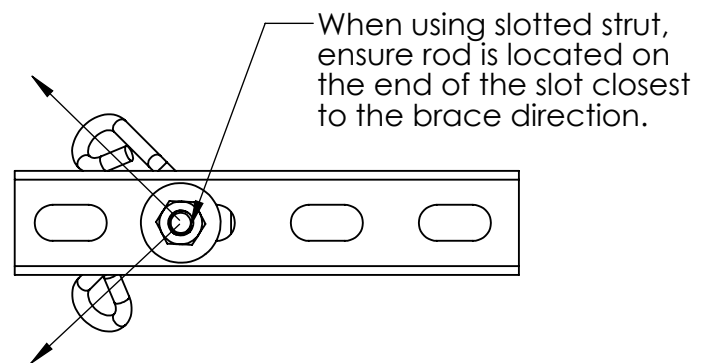
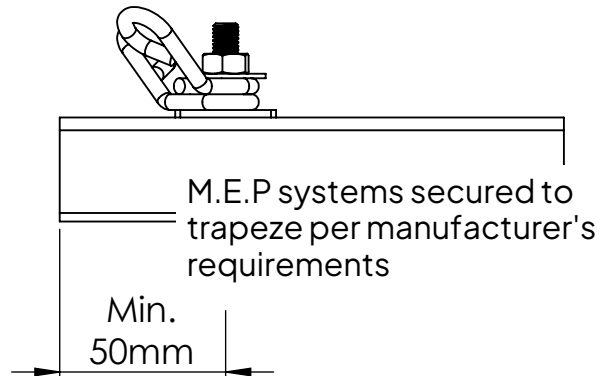
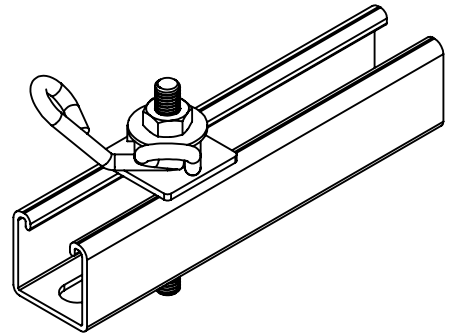


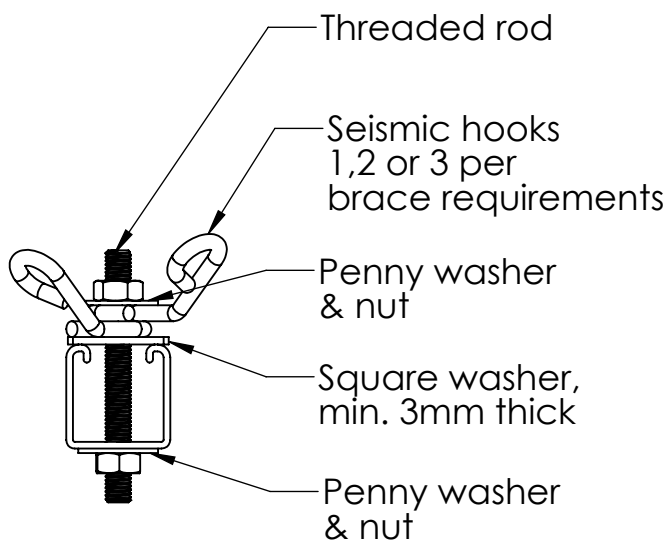


Alternative connection methods




This method is suitable for use with 1,
2 or 3 hooks per brace requirements

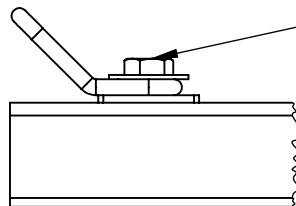

Min. M10 strut nut,
penny washer & bolt
torqued to min 26 Nm

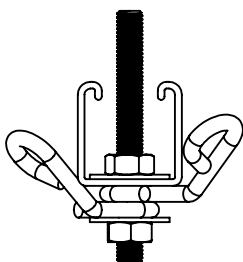

This method is only suitable for use with a 4
way transverse/longitudinal brace.
Seismic hooks must be sequenced as shown
to align at 45° angle

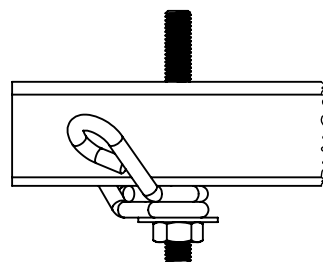

vaico

31 Whakapirau Road, Maungaturoto, New Zealand
vaicoglobal.com

Copyright Vaico Global © 2024

BRT1
Brace Connection Details

Drawing No.

BRT1

Revision

B